
#### CONNECTION DIAGRAM

#### Model No.: CPI-BM-NBT

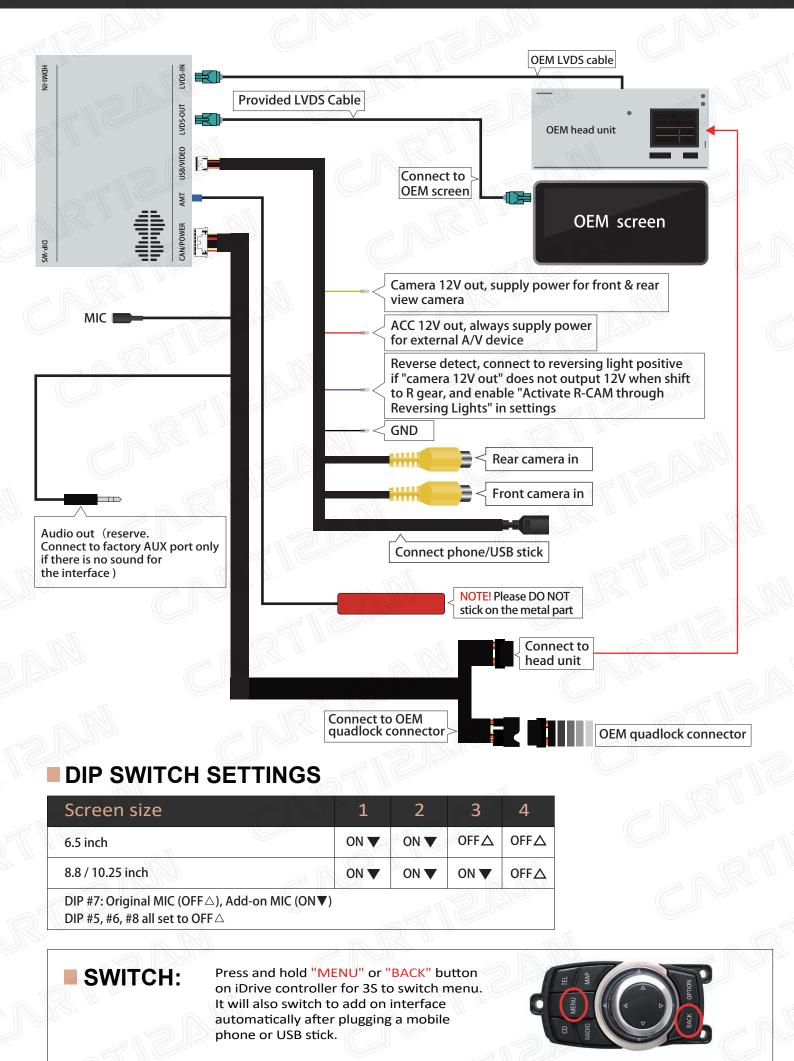

# OEM RADIO AUDIO SETTINGS:

1. For car models with stock AUX port, make sure source switch to "AUX" mode on original car stereo for audio transmission before using the integration.

2. For car models with an AMI port, please plug in "AMI to AUX cable (sold separately)" then switch audio source to AMI mode.

3. For car models without AUX or AMI port (e.g. BMW EVO, Mercedes NTG 5, etc.), please plug in the provided "AUX-USB" adapter then switch audio source to "AUX-USB" mode.

### QUICK RESTART TIPS:

Press and hold the "BACK" button for 10s will restart the integration immediately

# WHAT'S IN THE BOX





Power/CAN harness

USB/Video cable

#### LVDS cable



WiFi/BT antenna